


# Hydro –Excavation Vehicle Set Up for Equi-Potential Bond Mat Use During High Voltage Line Excavation

Weld  $\frac{3}{4}$ " Diameter – 3" Long Stainless Steel  
or Alum Lug

Position as close to control box as possible

Note: Avoid bolted joints / connections between bond location and  
control box (ie. Bolted bumper to frame)

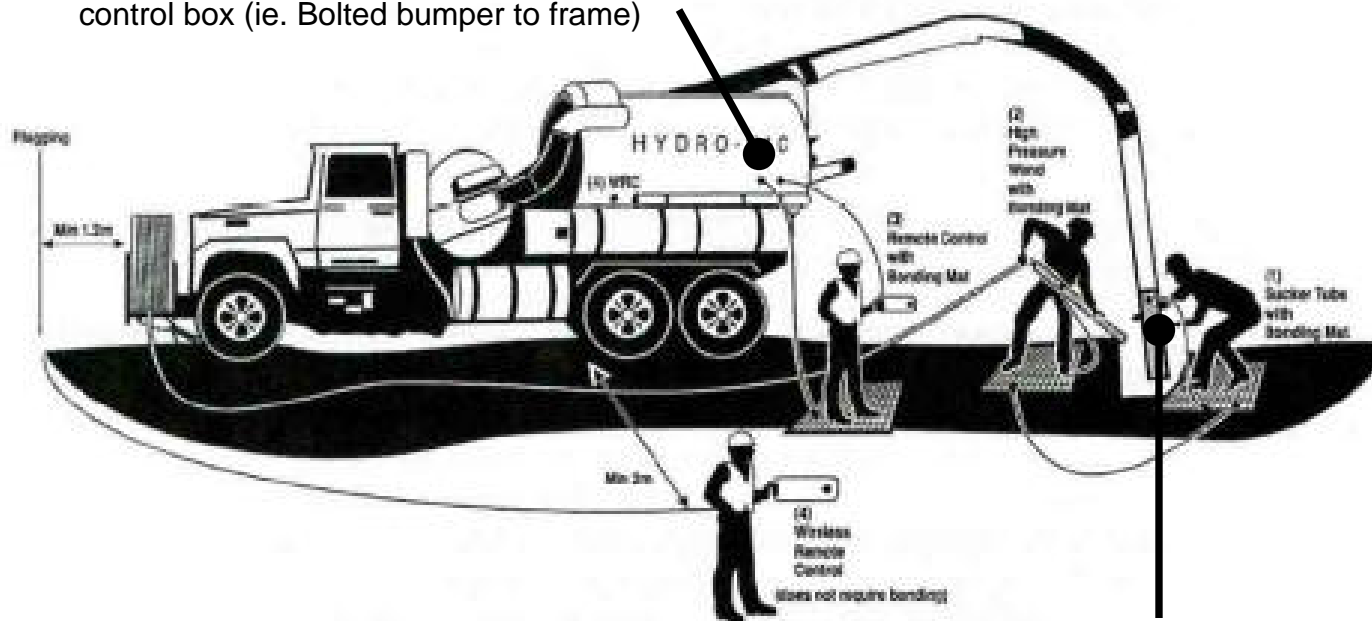

Weld  $\frac{3}{4}$ " Diameter – 3" Long Aluminum Lug  
Or

Weld a  $\frac{3}{4}$ " Nut that mates to a 3" bolt  
(Note: bolt / nut joint must be snug and cleaned for each use)